



Thank you for choosing the PolishWiFi. This pocket WiFi brings you a high speed wireless network connection. This document will help you understand your pocket WiFi so you can start using it right away. Please read this document carefully before using your pocket WiFi. If you have any trouble please go on website polishwifi.com/en/faq.html or send a message to: info@polishwifi.com



How does it work?

1. 0n/0ff




Press 3-5 sec on the power button.

If the pocket WiFi have some bugs to start or turn off: Press 10 sec on the power button




2. Screen information

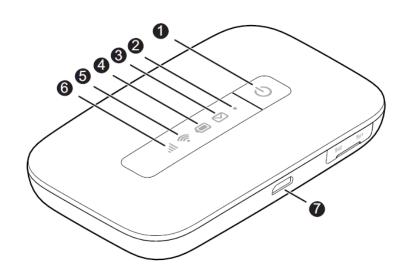

- OPower On/Off button.
- Power indicator. If it blinks slowly, it is in Standby mode.
- 4 Battery level.
- **6** Signal strength.
- Charge MicroUSB socket.



3. Connect your device

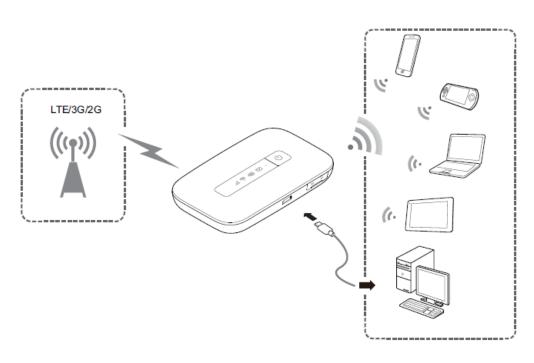

- Open the settings app
- Choose WiFi
- Select Polish WiFi network
- Enter the password printed in the back of the pocket WiFi



4. Use it



- Up to 10 devices simultaneously
- If the Pocket WiFi has been inactive for some time, it enters to the standby mode, in which the display screen turns off. Pressing any button causes the display screen to light up.



5. Charge it

If the Pocket WiFi has not been used for a long time or if the battery is fully depleted, the Pocket WiFi may not power on immediately after the charger is plugged in. Please charge the battery for a while before attempting to power on the Pocket WiFi.

Method 1: Use the charger to charge the device

Method 2: Charge the device through a computer connection



6. Any trouble?

Please go on website polishwifi.com/en/faq.html or send a message to: info@polishwifi.com